






# HYDRAULIC RAIL INSTRUCTIONS



@ELITEGLASSOLUTIONS

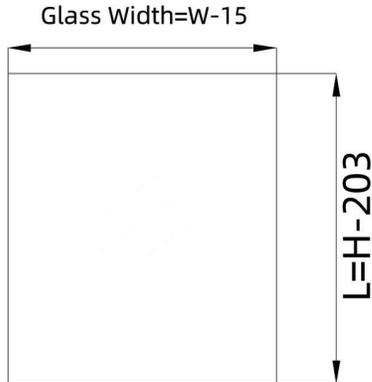


**1** For Single Door

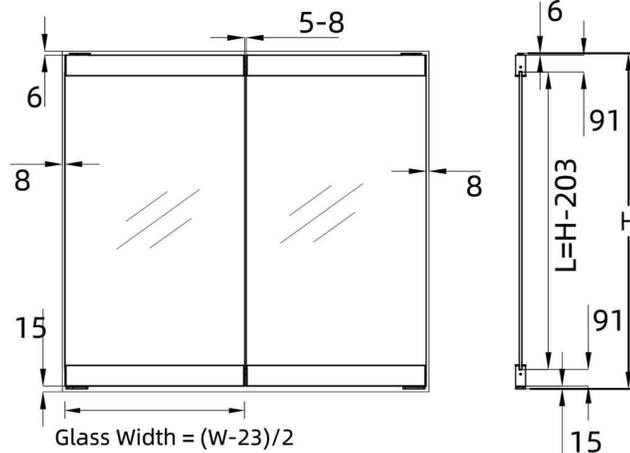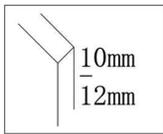


**2** For Double Door

## Top Positioning

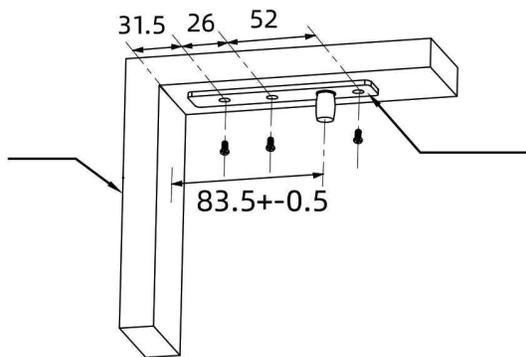


**3**

## Ground Drilling

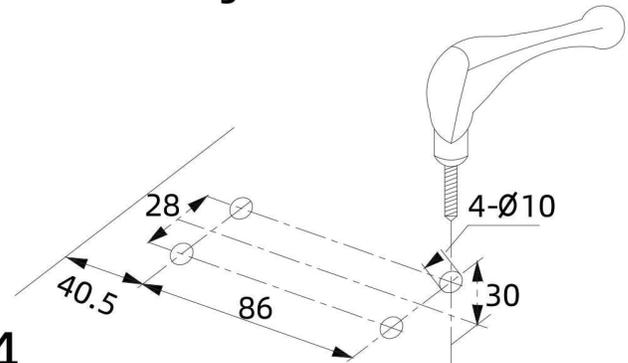


**4**

## Mounted Screws (Base plate)

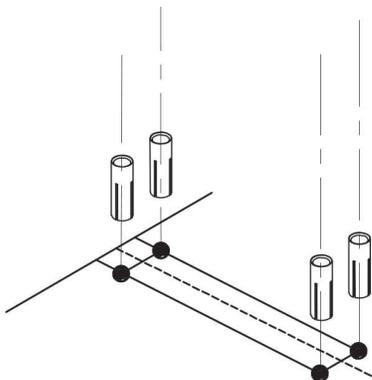

**5**


## Mounted Base Plate

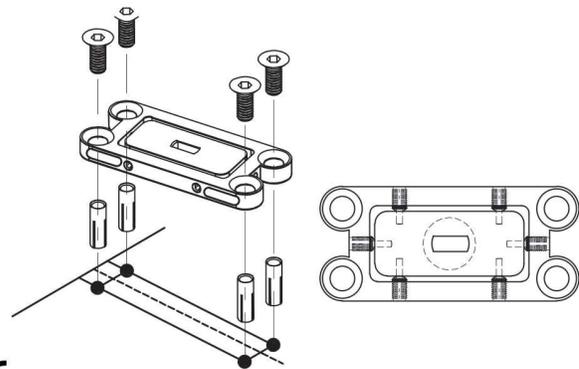

**6**

### Top Rail


7

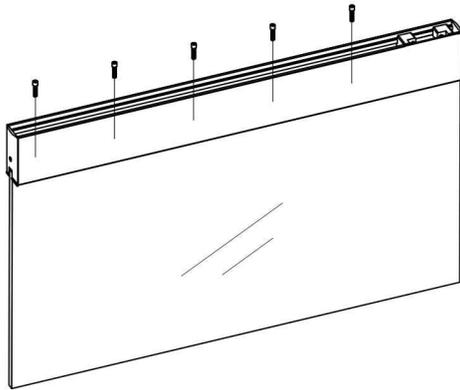

### Bottom Rail


The edge of the hydraulic pump should be aligned with the edge of the door rail.

8

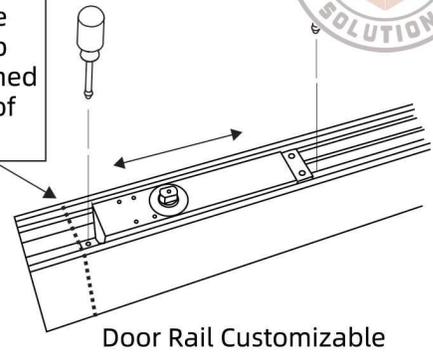


### Bottom Rail


9

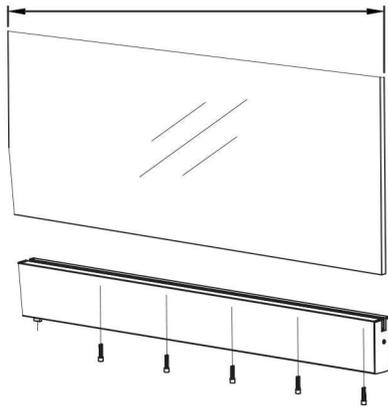


10

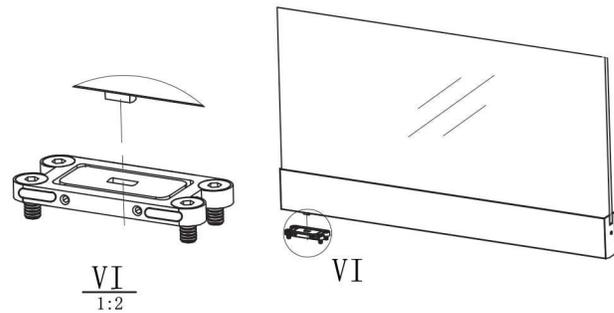


11

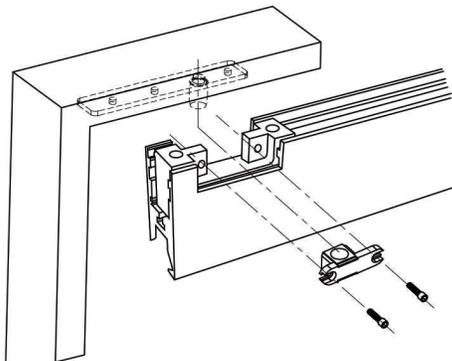

12


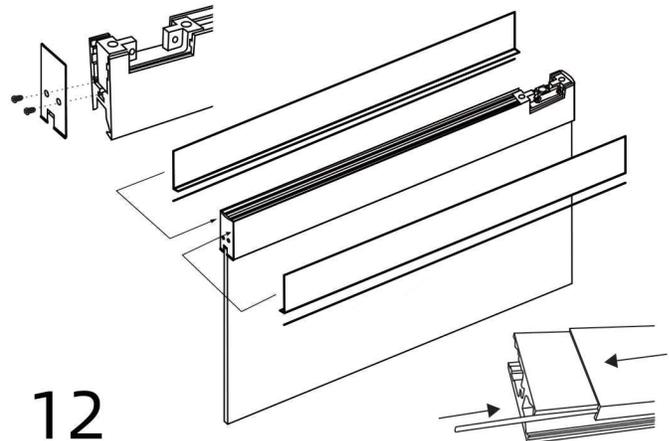


13

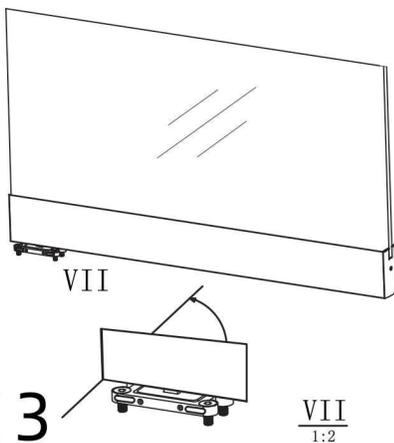


### Hydraulic Adjustment

14

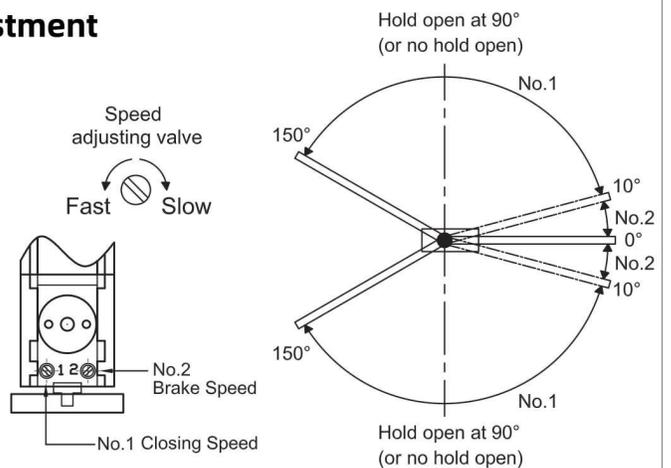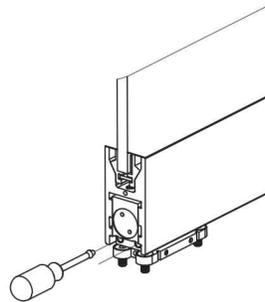


15

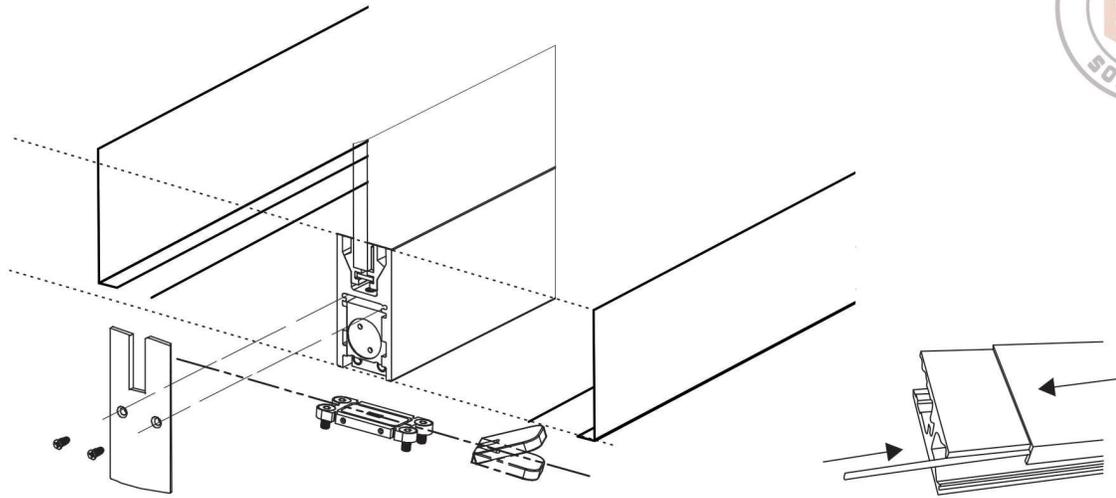

**Door Adjustment**



One Door  
Max 100kg

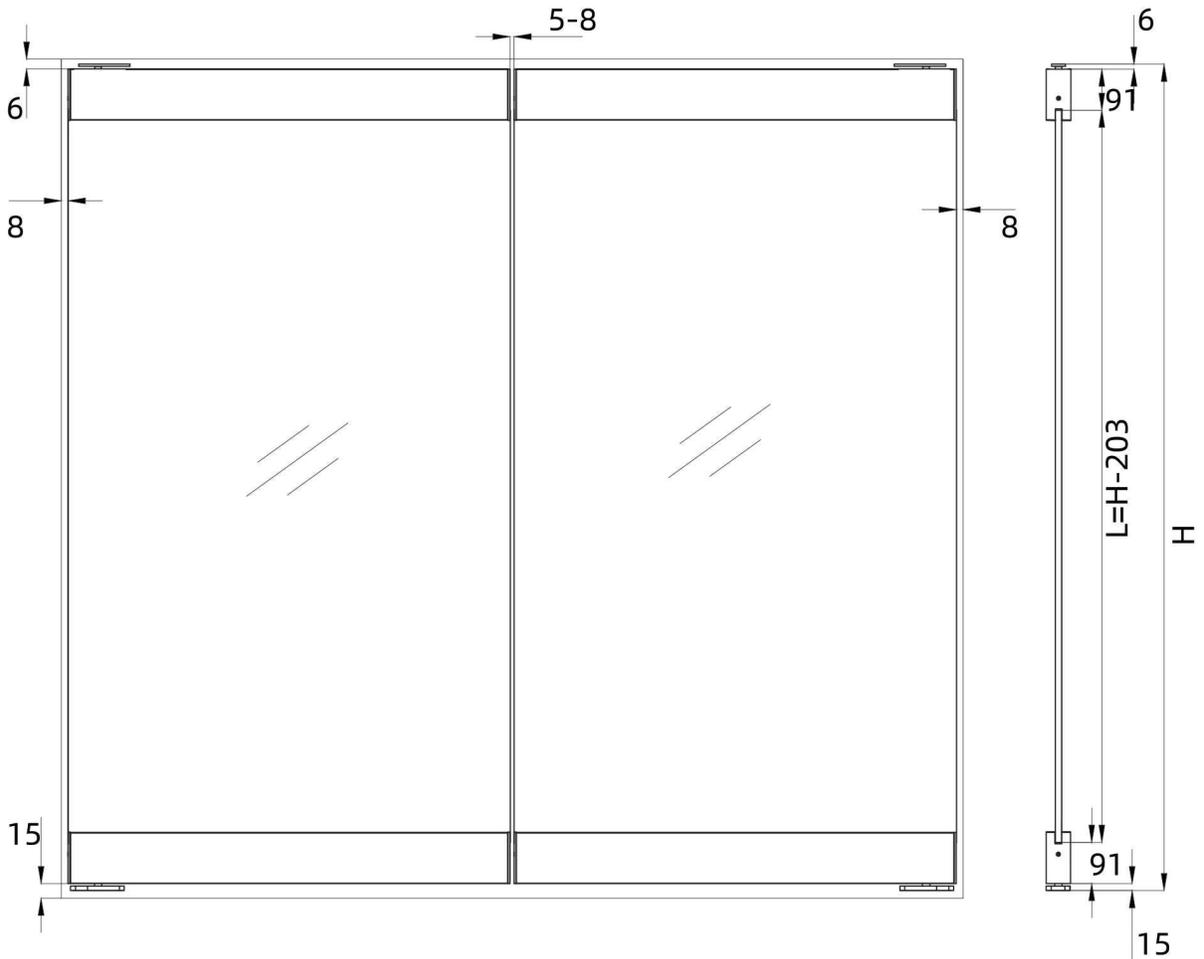

16